



ADA-121 RM Strobe Connection Diagram

ADA-100 Strobe Wiring Diagram Using The K1 Relay for Master Activation ONLY

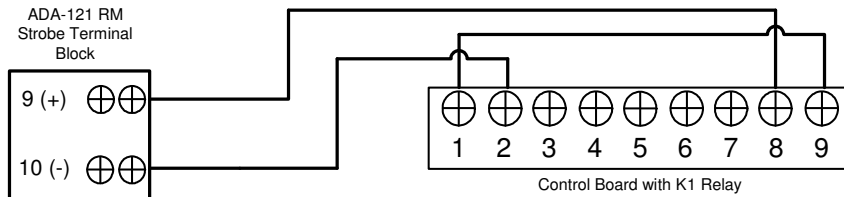

1. Connect terminal 9 (+) at the ADA-121 RM to Terminal #8 at the control board in the Relay Card Cabinet
2. Connect terminal 10(-) at the ADA-121 RM to Terminal #2 at the control board in the Relay Card Cabinet
3. Connect a jumper between Terminal #1 and #9 at the Control Board

ADA-100 Strobe Wiring Diagram Using The Area Station

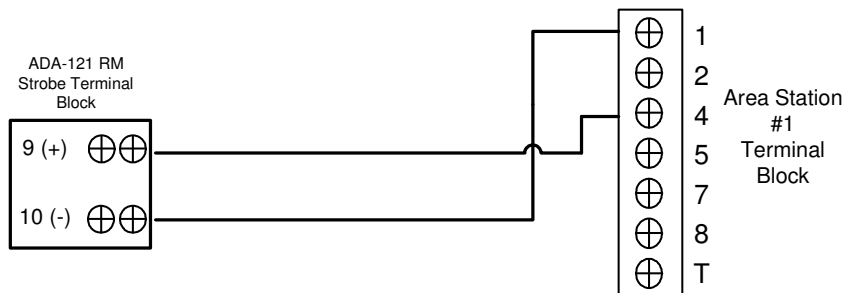

1. Connect terminal 9 (+) at the ADA-121 RM to Terminal #4 at the Relay Card in the Relay Card Cabinet
2. Connect terminal 10(-) at the ADA-121 RM to Terminal #1 at the Relay Card in the Relay Card Cabinet